



MOUNTING TAPE

INSTALLATION INSTRUCTIONS

#MOUNT-TAPE-16

**For Inspire NUDE and POLYELITE LED
Tape Light. Used to fasten tape light to
wood or other porous surfaces.**

STEP 1

Unroll and measure needed amount.



STEP 2

Cut off the measured amount.




STEP 3

Peel back white film from adhesive and adhere to surface (This holds the mounting tape in place prior to screws or staples).




STEP 4

Screw or staple mounting tape to surface for full support.

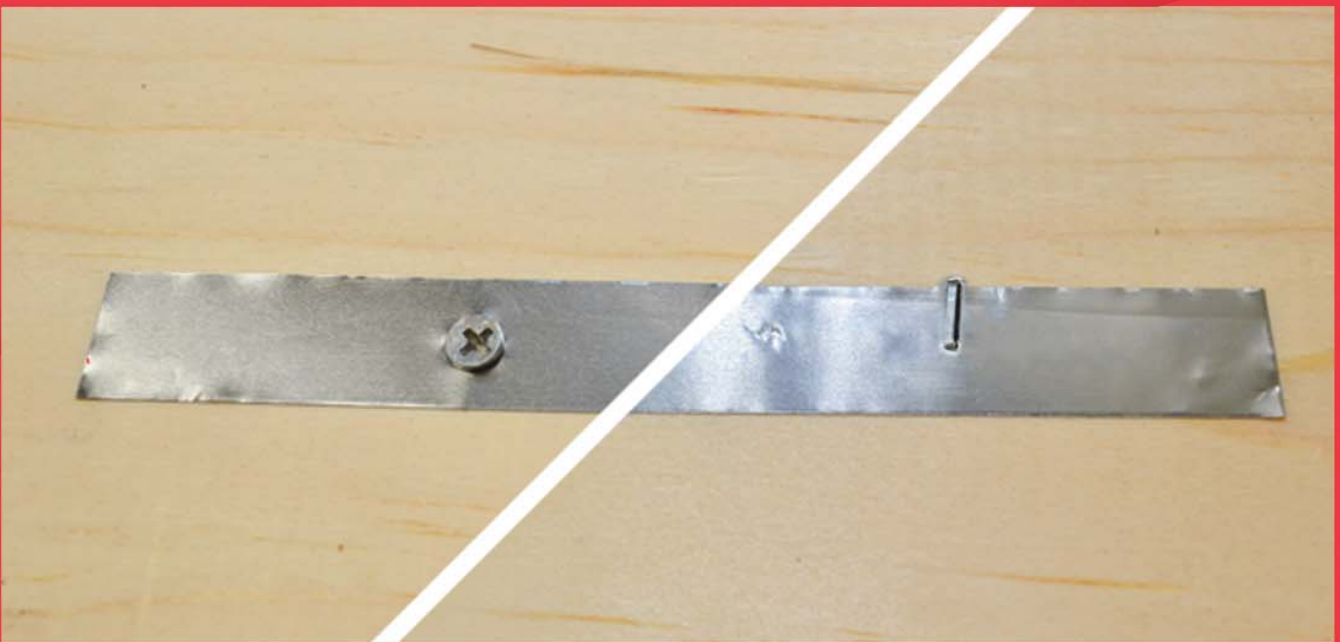

STEP 5

Peel back red film from tape light adhesive and adhere tape light to mounting tape.

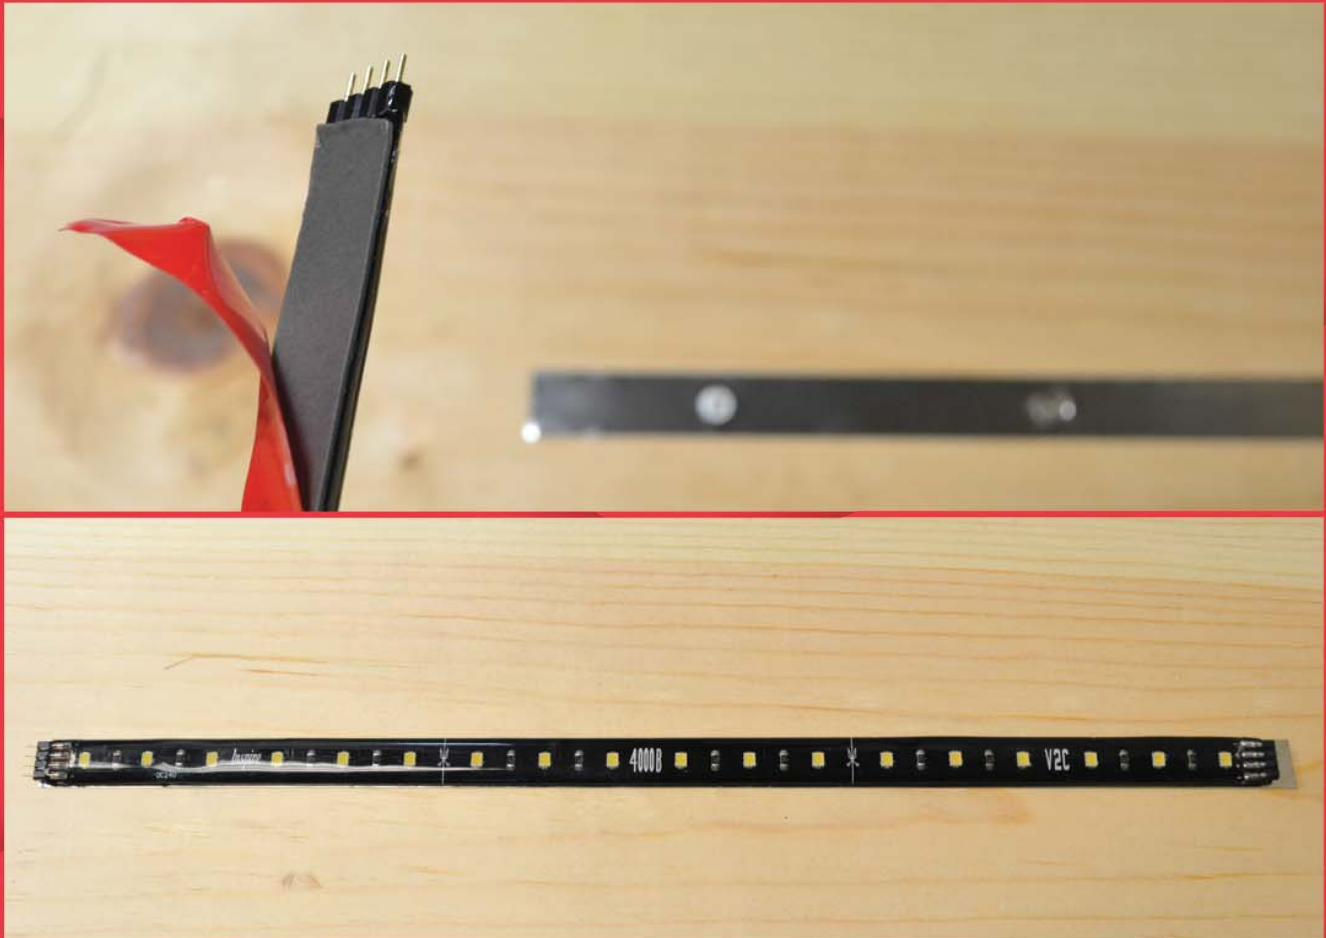

CONTACT US FOR SUPPORT:

DESIGNS@LEDINSPIRATIONS.COM

WWW.LEDI.LIGHTING

832.717.2710

